



1

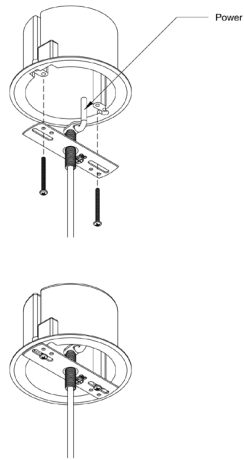


Connect the power and mount the crossbar to the junction box.

2

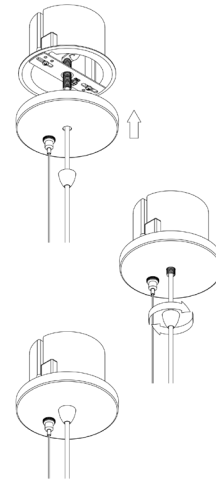


Put on the canopy, and screw the wide cone until the canopy is firmly secured.

3

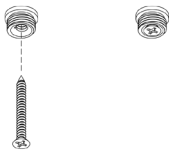


Mount the threaded stud to the ceiling.

4

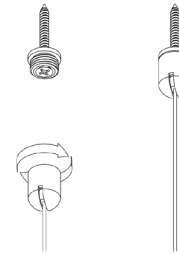

Screw the cap slotted cap to the stud until it is firmly secured.

5

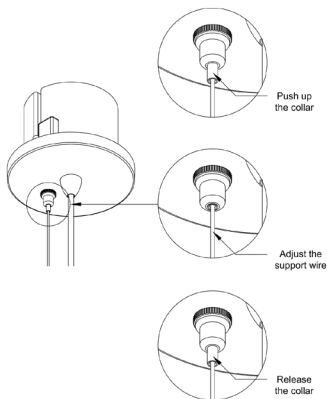

Adjust the support wire.

